



**Supplement for**  
***HE800STP100***

# **SmartStack™ Stepper Positioning Module**

**Second Edition**  
**10 February 2000**

**SUP0270-02**



## PREFACE

This manual explains how to use the Horner APG SmartStack™ Stepper Positioning Module.

Copyright (C) 2000, Horner APG, LLC, 640 North Sherman Drive, Indianapolis, Indiana 46201. All rights reserved. No part of this publication can be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior agreement and written permission of Horner APG, LLC.

All software described in this document or media is also copyrighted material subject to the terms and conditions of the Horner Software License Agreement.

Information in this document is subject to change without notice and does not represent a commitment on the part of Horner APG, LLC.

Cscape, SmartStack, and CsCAN are trademarks of Horner APG, LLC.

Windows, Windows NT, Windows 95 and Windows 98 are registered trademarks of Microsoft Corporation.

***For user manual updates, contact Horner APG, Technical Support Division, at (317) 916-4274 or visit our website at [www.heapg.com](http://www.heapg.com).***

## LIMITED WARRANTY AND LIMITATION OF LIABILITY

Horner APG, LLC. ("HE-APG") warrants to the original purchaser that SmartStack™ Stepper Positioning Module manufactured by HE-APG is free from defects in material and workmanship under normal use and service. The obligation of HE-APG under this warranty shall be limited to the repair or exchange of any part or parts which may prove defective under normal use and service within two (2) years from the date of manufacture or eighteen (18) months from the date of installation by the original purchaser whichever occurs first, such defect to be disclosed to the satisfaction of HE-APG after examination by HE-APG of the allegedly defective part or parts. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE AND OF ALL OTHER OBLIGATIONS OR LIABILITIES AND HE-APG NEITHER ASSUMES, NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR HEAPG, ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF THIS SmartStack™ Stepper Positioning Module. THIS WARRANTY SHALL NOT APPLY TO THIS SmartStack™ Stepper Positioning Module OR ANY PART THEREOF WHICH HAS BEEN SUBJECT TO ACCIDENT, NEGLIGENCE, ALTERATION, ABUSE, OR MISUSE. HE-APG MAKES NO WARRANTY WHATSOEVER IN RESPECT TO ACCESSORIES OR PARTS NOT SUPPLIED BY HE-APG. THE TERM "ORIGINAL PURCHASER", AS USED IN THIS WARRANTY, SHALL BE DEEMED TO MEAN THAT PERSON FOR WHOM THE SmartStack™ Stepper Positioning Module IS ORIGINALLY INSTALLED. THIS WARRANTY SHALL APPLY ONLY WITHIN THE BOUNDARIES OF THE CONTINENTAL UNITED STATES.

In no event, whether as a result of breach of contract, warranty, tort (including negligence) or otherwise, shall HE-APG or its suppliers be liable of any special, consequential, incidental or penal damages including, but not limited to, loss of profit or revenues, loss of use of the products or any associated equipment, damage to associated equipment, cost of capital, cost of substitute products, facilities, services or replacement power, down time costs, or claims of original purchaser's customers for such damages.

**To obtain warranty service, return the product to your distributor with a description of the problem, proof of purchase, post paid, insured and in a suitable package.**

## ABOUT PROGRAMMING EXAMPLES

Any example programs and program segments in this manual or provided on accompanying diskettes are included solely for illustrative purposes. Due to the many variables and requirements associated with any particular installation, Horner APG cannot assume responsibility or liability for actual use based on the examples and diagrams.

It is the sole responsibility of the system designer utilizing the SmartStack™ Stepper Positioning Module to appropriately design the end system, to appropriately integrate the SmartStack™ Stepper Positioning Module and to make safety provisions for the end equipment as is usual and customary in industrial applications as defined in any codes or standards which apply.

**Note:           The programming examples shown in this manual are for illustrative purposes only. Proper machine operation is the sole responsibility of the system integrator.**

## REVISIONS TO THIS MANUAL

This version (SUP0270-02) of the SmartStack Stepper Positioning Module Supplement contains the following revisions, additions, and deletions:

1. Added text for new features in Section 1.3 and Section 5.3.6 (Auto Repeat of Relative and Indexed Moves).
2. Added text for a new feature allowing the optional use of DIR as a move in progress output (for indexed moves only) in Section 1.3 and in a note contained in Section 5.3.6.
3. Incorporated the information contained in Chapter 6 (formerly **Figuring Parameters**) into the Chapter 4 (**Registers**). Chapter 6 is now replaced by **Using Encoders** (formerly Chapter 7), and Chapter 7 is now replaced by **Wiring** (formerly Chapter 8).  
  
Added new table to Chapter 4 and numbered it as Table 4.1: STP100 Module OCS Register Summary. Tables and other information have been renumbered throughout Chapter 4 to reflect the incorporation of Chapter 6 material.
4. Eliminated the S-Curve feature (Section 1.3 and 1.7).  
  
Replaced Figure 1.5 (S-Curve Motion Profile) with new drawing (Triangular Motion Profile).
5. Added new figure to Chapter 1 (Figure 1.1) and Chapter 7 (Figure 7.6).
6. Made clarifications and punctuation corrections throughout edition as needed.
7. Added Table 6.1 covering example encoder multiplier and divisor values.



## TABLE OF CONTENTS

<b>PREFACE .....</b>	<b>3</b>
<b>LIMITED WARRANTY AND LIMITATION OF LIABILITY .....</b>	<b>4</b>
<b>ABOUT PROGRAMMING EXAMPLES .....</b>	<b>4</b>
<b>CHAPTER 1: INTRODUCTION.....</b>	<b>9</b>
1.1 General.....	9
1.2 Overview.....	9
1.3 Features .....	9
1.4 Specifications.....	10
1.5 Signal Descriptions .....	11
1.5.1 Isolated Inputs.....	11
1.5.2 Differential Inputs .....	11
1.5.3 Differential Outputs .....	12
1.6 Indicators .....	12
1.7 Motion Profiles .....	12
<b>CHAPTER 2: INSTALLATION.....</b>	<b>15</b>
2.1 General.....	15
2.2 Installation .....	15
2.3 External Wiring.....	16
2.4 Addressing.....	17
<b>CHAPTER 3: CONFIGURATION.....</b>	<b>19</b>
3.1 General.....	19
3.2 Configuration .....	19
3.2.1 Select the Module to be Configured.....	19
3.2.2 Check the Module's I/O Register Assignments .....	21
3.2.3 Configure the Module .....	21
<b>CHAPTER 4: REGISTERS .....</b>	<b>23</b>
4.1 General.....	23
4.2 STP100 Module OCS Register Details .....	24
4.2.1 Error and Status Input Bit Register Details (%I1 - %I16) .....	24
4.2.2 Status Word Input Register Details (%AI1 - %AI4).....	25
4.2.3 Command Word Output Register Details (%AQ1 - %AQ7 or %AQ1 - %AQ14) .....	26
4.2.4 Command Bit Output Register Details (%Q1 - %Q16).....	29
<b>CHAPTER 5: COMMANDS .....</b>	<b>31</b>
5.1 General.....	31
5.2 Issuing Commands .....	31
5.3 Available Commands .....	31
5.3.1 Clear Error(s) Command.....	31
5.3.2 Find Origin Up and Find Origin Down Commands.....	32
5.3.3 Jog Up and Jog Down Commands .....	33
5.3.4 Move Relative and Move Absolute Commands.....	34
5.3.5 Move Indexed Command .....	35
5.3.6 Repeat Move Command.....	36
5.3.7 Resume Move Command.....	36
5.3.8 Set Current Position Command .....	37
5.3.9 Decelerate and Stop Command.....	37
5.3.10 Immediate Stop Command.....	38

<b>CHAPTER 6: USING ENCODERS.....</b>	<b>39</b>
6.1 General.....	39
6.2 Adding an Encoder.....	39
6.2.1 Quadrature Encoder.....	39
6.2.2 Up / Down Encoder.....	40
6.3 Configuring the Encoder.....	40
6.3.1 Configuring Step Pulse to Encoder Feedback Ratio.....	40
6.3.2 Configuring Encoder Tolerance .....	41
6.3.3 Configuring Motor Stall Detection .....	42
<b>CHAPTER 7: WIRING .....</b>	<b>43</b>
7.1 General.....	43
7.2 Translator Drives.....	43
7.3 Encoders.....	44
7.4 Isolated Switch Inputs .....	45
<b>INDEX .....</b>	<b>47</b>



## CHAPTER 1: INTRODUCTION

### 1.1 General

Chapter One provides a brief overview of the SmartStack Stepper Positioning Module (HE800STP100).

### 1.2 Overview

The SmartStack Stepper Positioning Module (STP100) is an intelligent, programmable motion control SmartStack module, for use with Horner APG Operator Control Station (OCS) products. The STP100 is capable of interfacing to a wide variety of stepper motors, limit switches, and encoder feedback devices.

### 1.3 Features

- Single axis motion controlled by application ladder program
- Up to 245,730 steps or micro-steps per second
- Programmable position, velocity, acceleration and deceleration
- Automatic ramp-down deceleration calculation
- Moves can be specified as absolute, relative or indexed
- Relative and indexed moves can be auto-repeated
- Automatic find origin functions
- Manual jogging functions
- Home and over-travel inputs
- Emergency stop input
- Incremental encoder feedback inputs
- Power / watchdog timeout safety interlock

## 1.4 Specifications

Table 1.1 – Stepper Input and Outputs			
ISOLATED INPUTS			
LOW LEVEL (+2mA)		ISOLATION	
Emergency Stop (ES)	0 - 9 VDC	Emergency Stop (ES)	500 VDC min.
Home (HO)		Home (HO)	
Index (IN)		Index (IN)	
High Limit (HI)		High Limit (HI)	
Low Limit (LO)		Low Limit (LO)	
DIFFERENTIAL INPUTS			
Encoder Frequency	0 - 1.0 MHz	Encoder Differential Threshold Low	-0.2 VDC min.
Encoder Single-Ended Threshold	1.2 – 1.6 VDC	Encoder Differential Threshold High	+0.2 VDC max.
DIFFERENTIAL OUTPUTS			
Step Frequency	0 - 245 KHz	Direction Output Setup Time	2 ms. max.
Step Output High @ -20 mA	2.5 VDC min.	Direction Output High @ -20 mA	2.5 VDC min.
Step Output Low @ +20 mA	0.5 VDC max.	Direction Output Low @ +20 mA	0.5 VDC max.
GENERAL SPECIFICATIONS			
* Required Power (Steady State)	26.0mA @ 5VDC	** CE Rating	See MAN0005
* Required Power (Inrush)	64.8mA @ 5VDC in 10µS	UL	Pending
Relative Humidity	5 to 95% Non-condensing	Terminal Type	Spring Clamp, Removable
Operating Temperature	0° to 60° Celsius	Weight	9.5 oz. (270 g)
Storage Temperature	-40° to +85° Celsius		
* As measured at the PLC (OCS 100 / 200 or RCS210).			
** Shielded cables must be used for the discrete inputs to this module (pins 1-7) to obtain immunity protection specified by the EN50082-2:92. Failure to do so subjects the equipment to Criterion B failure and voids the CE rating of this product.			

## 1.5 Signal Descriptions

### 1.5.1 Isolated Inputs

**Emergency Stop**, **Home**, **Low Limit**, **High Limit**, and **Index** are optically isolated using the following circuitry. [Circuitry inside the dotted line is physically located inside the SmartStack module.] **Home**, **Low Limit**, **High Limit**, and **Index** can accept either mechanical switch closures or NPN-type proximity switches.

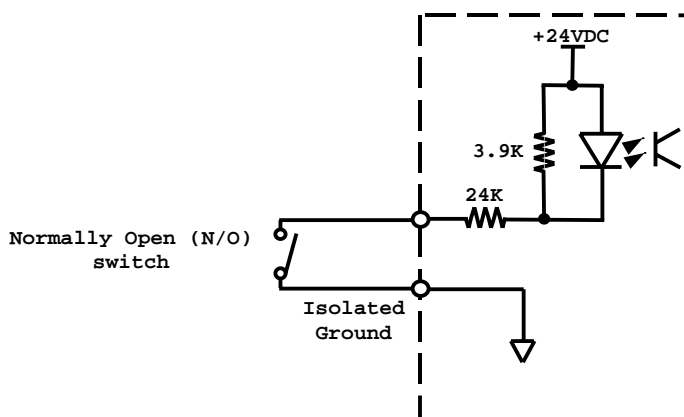


Figure 1.1 – Isolated Input Schematic

**Home**, **Low Limit**, **High Limit**, and **Index** are active low signals. A Normally Open (N/O) switch is required to switch these lines to ground when the switch is activated.

**Emergency Stop** is an active high signal. A Normally Closed (N/C) switch is required to hold this line to a LOW (grounded) condition for normal operation of the system.

### 1.5.2 Differential Inputs

The Encoder Inputs **Encoder A**, **Encoder B** and **Marker** accept differential inputs (Circuitry inside the dotted line is physically located inside the SmartStack module.) They have RS-485 thresholds. The + inputs are also TTL compatible when connected to single-ended encoder outputs of suitable polarity.

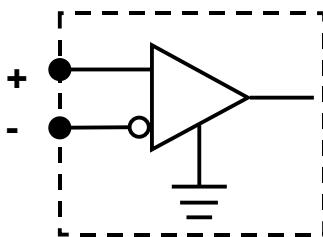


Figure 1.2 – Differential Input Schematic

### 1.5.3 Differential Outputs

**Step** and **Direction** Output Signals have RS-485 drive capability and can be interfaced with TTL level inputs of suitable polarity.

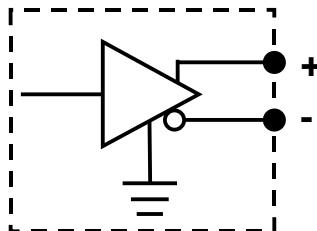


Figure 1.3 – Differential Output Schematic

## 1.6 Indicators

The STP100 provides three (3) LED indicators:

Table 1.2 – LED Indicators	
Indicator Color	Function
Red	Motor is Stopped
Yellow	Motor is Accelerating or Decelerating
Green	Motor has reached Running Velocity

## 1.7 Motion Profiles

For a typical move, the STP100 starts at a low Base Velocity, accelerates up to the Running Velocity, and later decelerates down to the Base Velocity, and then stops. This is known as the trapezoidal motion profile, and is shown in Figure 1.4 below.

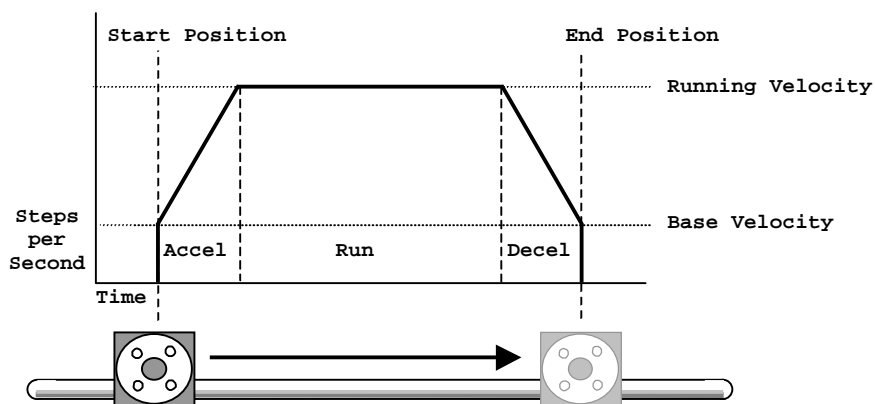


Figure 1.4 – Trapezoidal Motion Profile

For a given set of programmed Acceleration and Deceleration Times, a particular move can be too short to allow the motor to accelerate all the way up to Running Velocity. If it is time to start decelerating before accelerating to Running Velocity has completed, the motor will start decelerating at that point. In this case, the acceleration and deceleration rates (in pulses-per-second<sup>2</sup>) are preserved, but the acceleration and deceleration times are decreased. When this happens, the velocity profile becomes triangular, as shown in Figure 1.5 below.

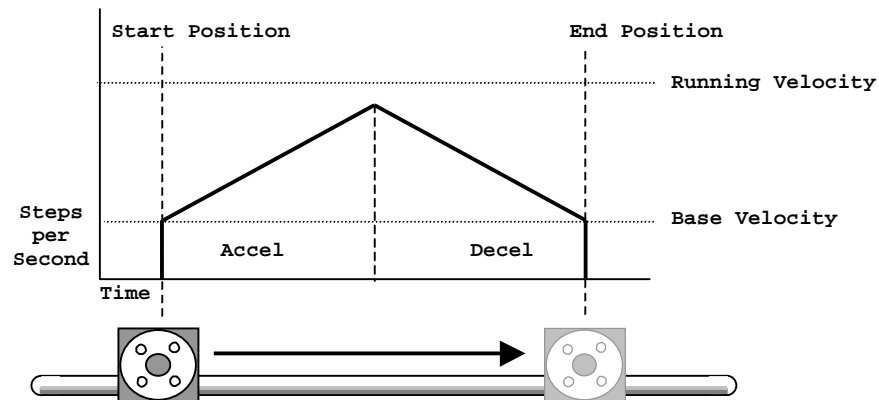


Figure 1.5 – Triangular Motion Profile

NOTES

## CHAPTER 2: INSTALLATION

### 2.1 General

Chapter Two describes the installation of the STP100 module on the Operator Control Station (OCS) chassis.

### 2.2 Installation

**WARNING:** The STP100 must not be installed while power is applied to the OCS- or when the cables to the motor drive are attached to the SmartStack I/O connector. Always ensure that the motor is disconnected and that power to the OCS is OFF. The power to the OCS must be unplugged.

The STP100 can be placed in any SmartStack slot.

**Caution:** To function properly and to avoid possible damage, do not install more than four Smart Stack™ Modules per OCS or RCS.

#### A. Installing SmartStack Modules

1. Hook the tabs. Each SmartStack Module has two tabs that fit into slots located on the OCS. (The slots on the OCS are located on the back cover.)
2. Press the SmartStack Module into the locked position, making sure to align the SmartStack Module fasteners with the SmartStack receptacles on the OCS.

#### B. Removing SmartStack Modules

1. Using a flathead screwdriver, pry up the end of the SmartStack Module (opposite of tabs) and swing the module out.
2. Lift out the tabs of the module.

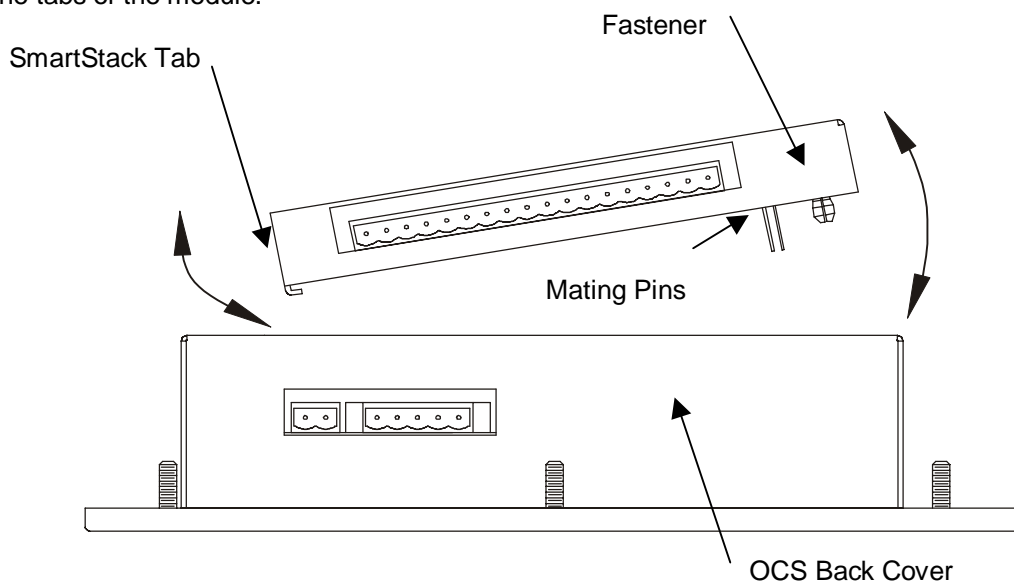
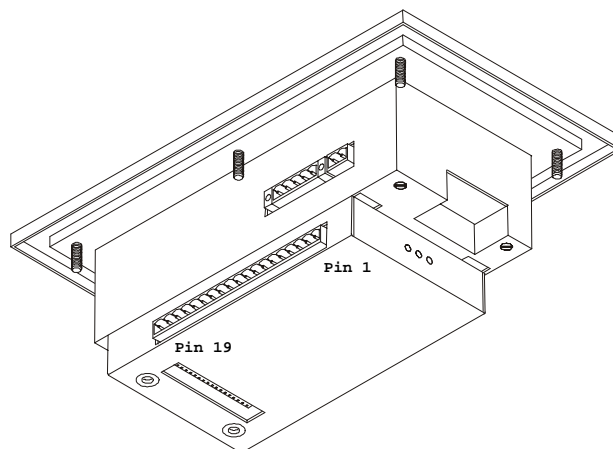


Figure 2.1 – Installing a SmartStack Module on an OCS

## 2.3 External Wiring

The STP100 requires user-supplied external wiring between the module and the user-supplied external equipment, such as motor drive, limit switches and encoder.

The STP100 provides nineteen (19) external connection points. Not all points are used in all installations. When installed on an OCS, the STP100 SmartStack appears as the following:



**Figure 2.2 – STP100 Attached to an OCS**

The nineteen pins have the following functions:

Table 2.1 – I/O Pin-Out			
Pin	Signal	Marking	Description
1	Isolated Common	IC	Isolated Common
2	ESTOP+	ES	Emergency Stop, Active High (Open), 24VDC pullup
3	LOLIM-	LO	Low Limit, Active Low (Closed) 24 VDC pullup
4	HILIM-	HI	High Limit, Active Low (Closed) 24 VDC pullup
5	HOME-	HO	Home, Active Low (Closed) 24 VDC pullup
6	INDEX-	IN	Index, Active Low (Closed) 24 VDC pullup
7	Isolated Common	IC	Isolated Common
8	Common	C	Connected to internal Bus Common
9	MARK+	M+	Encoder Marker Positive Input
10	MARK-	M-	Encoder Marker Negative Input
11	ENCA+	A+	Encoder Channel A Positive Input
12	ENCA-	A-	Encoder Channel A Negative Input
13	ENCB+	B+	Encoder Channel B Positive Input
14	ENCB-	B-	Encoder Channel B Negative Input
15	DIR+	D+	Direction Positive Output
16	DIR-	D-	Direction Negative Output
17	STEP+	S+	Step Positive Output
18	STEP-	S-	Step Negative Output
19	Common	C	Connected to internal Bus Common



## 2.4 Addressing

The STP100 module requires sixteen (16) digital input registers (%I), sixteen (16) digital output registers (%Q), four (4) analog input register (%AI), and seven (7) or fourteen (14) analog output registers (%AQ) depending on how the module is configured. The location of these registers within OCS I/O register space is determined by the type, number, and location of any installed SmartStack modules.

The OCS automatically assigns the I/O register space based on the physical position of the SmartStack Module. The first module, the one installed next to the main body of the OCS, is Module 1. Module 1 is always assigned to %I01, %Q01, %AI01 and %AQ01 in any combination required by the SmartStack module.

The addressing of subsequent modules is determined by the addressing of those modules before it. This assignment is automatic and makes the most efficient use of I/O register space.

For example, assume that Module 1 is a HE800DIM210. This module requires eight (8) %I registers, no %Q registers, no %AI registers, and no %AQ registers. Its %I registers are %I01 through %I08, inclusive.

Now assume that the STP100 is Module 2. The STP100 requires sixteen (16) %I registers. Because of the previously installed DIM210, the STP100's %I registers are %I09 through %I24, inclusive.

Since no other installed modules have yet required %Q or %AI, the OCS assigns the STP100's registers to %Q01 through %Q16 and %AI01 through %AI04.

The STP100 requires either seven (7) or fourteen (14) %AQ registers, depending on how the module is configured. Since no other installed modules have yet required a %AQ register, the OCS assigns the STP100 to %AQ01 through %AQ07, or %AQ01 through %AQ14, depending on the configuration.

This can be summarized by checking the module I/O Map dialog box, as described in Chapter 3. The dialog box indicates the addressing and size of the required I/O register space. *This setup is assigned by the OCS and can not be changed.*

NOTES

## CHAPTER 3: CONFIGURATION

### 3.1 General

Chapter Three describes the steps necessary to configure the STP100 module and the OCS it is attached to. The procedures for using Cscape software are also described.

### 3.2 Configuration

Configuration is usually completed after the modules are installed. With Cscape, however, OCS configuration is contained with the source code (.CSP) files. The OCS can be configured before the modules are installed or even if the OCS is not available. This is a great convenience when programming must start before the hardware has been received.

#### 3.2.1 Select the Module to be Configured

First, invoke Cscape. From the Cscape Main Menu, select **C**ontroller | **I**/O **C**onfigure...

Next, double-click on the empty slot in which the STP100 module will reside, or click on the **Config** button to the right of the slot position.

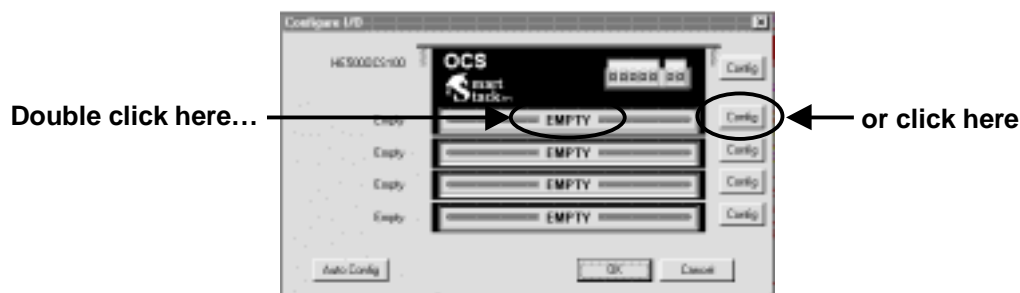


Figure 3.1 – Select the Module Slot

This invokes the Add I/O Module screen. Click on the **Other** tab:

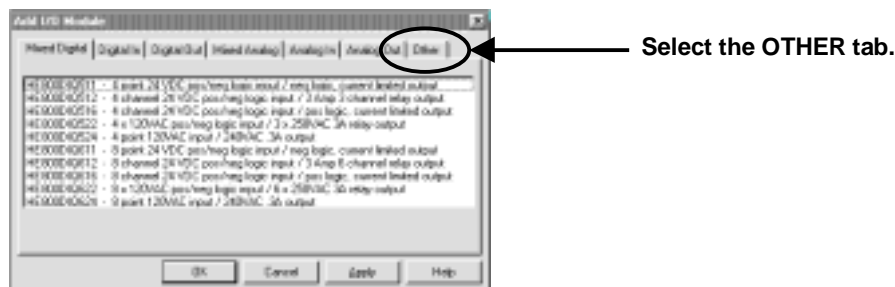


Figure 3.2 – Select the Other Modules tab

Then select the STP100 module:

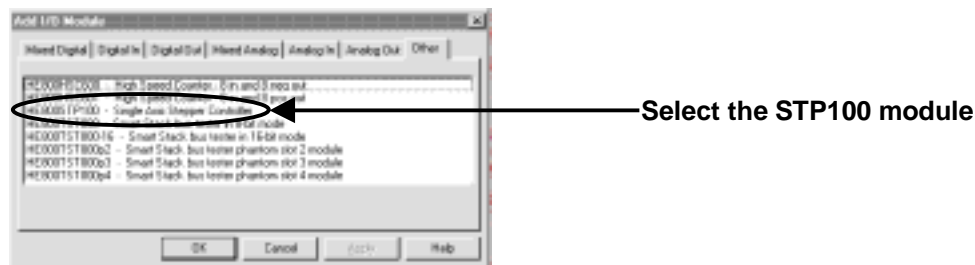


Figure 3.3 – Select the STP100 Module



Figure 3.4 – STP100 Module is Added

The screen returns to the Configure I/O dialog box- with the selected slot showing that the Stepper Controller module has been added.

It is vital that the module and slot match that of the OCS. Mismatched configurations cause an I/O Module Mismatch Error during the power-on diagnostics of the OCS.

### 3.2.2 Check the Module's I/O Register Assignments

Double click on the picture of the STP100 module's connector, or click the **Config** button to the right of it.

The I/O MAP tab shows the I/O register locations assigned to this module. These values are assigned automatically by Cscape and the OCS. *These values are not configurable by the user* except by installing the Stepper Controller Module in another position in the SmartStack stack. If the Stepper Controller is the *only* module installed on this OCS, then there is no way to reconfigure these values.



Figure 3.5 – Register Assignments from Cscape

Write down these values. This information is necessary to properly write the ladder program to control this module.

### 3.2.3 Configure the Module

Now, click on the **Module Setup** tab.

Select either **Home** or **Marker** as the Origin Source via the pull-down menu.



Figure 3.6 – Stepper Module Configuration Screen

Under **Mode**, be sure that **Normal** is selected. **Test** is used for production and quality control testing, and has no use in field applications.

Under **Origin Source**, select either **Marker** or **Home Switch**. If **Marker** is selected, the STP100 uses the encoder's Marker signal (or the user-provided Marker input) as the Origin input. If **Home Switch** is selected, the STP100 uses the externally supplied Home signal as the Origin input.

In the **Find Origin** box, select either the **Normal Method** or the **Simple Method**. With the **Simple Method**, when a Find Origin command is issued, the STP100 moves the motor until the Origin position is located and then stops. With the **Normal Method**, the STP100 moves the motor quickly until the Origin position is located, then backs up and re-approaches the Origin position at a slower rate. The **Simple Method** assumes the motor is initially moving slowly enough, such that it does not overshoot the Origin position.

Checking the **Limit Switch Qualified** box causes the Find Origin command to first search for a limit switch before searching for the Origin. This is especially useful when an encoder marker is being used as the Origin Source.

Under Encoder Configuration select **Encoder Type – None, Quadrature** or **Up/Down**. Absolute encoders and resolvers are not compatible with the STP100. With Quadrature selected, **Encoder A** and **Encoder B** accept phases A and B respectively from an encoder that supplies quadrature outputs. With **Up/Down** selected, **Encoder A** and **Encoder B** accept Up and Down signals respectively from an encoder that supplies Count Up and Count Down outputs.

When **Encoder Type** is not **None**, the other Encoder Configuration items (**Multiplier, Divisor, Tolerance and Stall Detection**) all become available for configuration. Enter suitable numbers into the **Multiplier, Divisor, and Tolerance** boxes, and if desired, check the **Enable Stall Detection** box.

**Multiplier** and **Divisor** are used to tell the STP100 about the number of encoder pulses per revolution versus the number of step pulses per revolution.

For many applications, some small amount of positioning error is acceptable. Setting the **Tolerance** to some non-zero value causes the STP100 to compare the encoder feedback value with the desired motor position. If the result of the comparison is less than the **Tolerance** value, no error is generated. If the result of the comparison is greater than the **Tolerance** value, the Current Position Valid status bit is set False. If **Tolerance** is set to 0 (zero) the comparison is not made and no error is indicated.

If the **Enable Stall Detection** box is checked, the STP100 verifies that encoder feedback pulses are being received after a move is requested. If encoder pulses are not received, the STP100 assumes that the motor is not turning, and sets the Motor Stalled error bit True. If **Enable Stall Detection** is unchecked, no error is generated if the motor fails to move.

If the application will be using Indexed Moves, check the **Enable Indexed Move** box. *The state of this box must match that of the Index Move box in the Stepper Move element in the Cscape ladder program.* Note that Indexed Moves require the presence of a user-supplied Index Input signal. If no Index Input signal is supplied, an Indexed Move behaves exactly like a **Relative Move**.

When the **Enable Indexed Move** box is checked, the STP100 module requires 14 %AQ registers instead of just 7. Be sure to check the modules I/O register assignment if this box is changed. If the STP100 is not the only SmartStack module installed or the last SmartStack module installed, all subsequent modules find their I/O register addresses shifted if the **Enable Indexed Move** box is checked.

**CHAPTER 4: REGISTERS****4.1 General**

Chapter Four defines the OCS registers used by the STP100 module, and describes how they are used.

For this discussion, it is assumed that the STP100 module is installed as the first SmartStack module in the OCS. In this case, the STP100 uses OCS registers starting with %I1, %Q1, %AI1 and %AQ1. If the STP100 is not the first SmartStack module, the actual registers that are used are determined by the type and position of the other SmartStack modules installed on the OCS. Table 4.1 summarizes STP100 register usage.

Table 4.1 – STP100 Module OCS Register Summary			
Error and Status Bit Input Registers		Command Bit Output Registers	
Register	Description	Register	Description
%I1	Emergency Stop Error	%Q1	Spare Command (future use)
%I2	Low End Limit Error	%Q2	Spare Command (future use)
%I3	High End Limit Error	%Q3	Spare Command (future use)
%I4	Illegal Move Error	%Q4	Find Origin Up
%I5	Motor Stalled Error	%Q5	Find Origin Down
%I6	Spare Error (future use)	%Q6	Jog Up
%I7	Spare Error (future use)	%Q7	Jog Down
%I8	Power-Up / Watchdog Error	%Q8	Move Relative
%I9	Current Position Valid Status	%Q9	Move Absolute
%I10	Pre-empted Move Resumable Status	%Q10	Resume Move
%I11	Spare Status (future use)	%Q11	Move Indexed
%I12	Spare Status (future use)	%Q12	Repeat Move
%I13	Currently at Origin Position Status	%Q13	Set Current Position
%I14	Motor is Accelerating Status	%Q14	Clear Error(s)
%I15	Motor is Decelerating Status	%Q15	Decelerate and Stop
%I16	Motor is Moving Status	%Q16	Immediate Stop
Status Word Input Registers			
Register	Description	Minimum	Maximum
%AI1	Motor Position Lo Word	-8,388,608	+8,388,607
%AI2	Motor Position Hi Word		
%AI3	Encoder Position Lo Word	-8,388,608	+8,388,607
%AI4	Encoder Position Hi Word		
Command Word Output Registers			
Register	Description	Minimum	Maximum
%AQ1	Destination Position Lo Word	-8,388,608	+8,388,607
%AQ2	Destination Position Hi Word		
%AQ3	Velocity Divisor	20	65535
%AQ4	Base Velocity (must be < %AQ5)	1	8191
%AQ5	Running Velocity (must be > %AQ4)	1	8191
%AQ6	Acceleration Time (mS)	1	27,300
%AQ7	Deceleration Time (mS)	0	27,300
%AQ8	Indexed Destination Position Lo Word	1	16,777,215
%AQ9	Indexed Destination Position Hi Word		
%AQ10	Indexed Deceleration Time (mS)	0	27,300
%AQ11	Indexed Window Open Position Lo Word	1	16,777,215
%AQ12	Indexed Window Open Position Hi Word		
%AQ13	Indexed Window Close Position Lo Word	1	16,777,215
%AQ14	Indexed Window Close Position Hi Word		

## 4.2 STP100 Module OCS Register Details

This section contains detailed information regarding the STP100 module's use of OCS registers.

### 4.2.1 Error and Status Input Bit Register Details (%I1 - %I16)

The STP100 uses sixteen (16) Digital Input (%I) registers as Error and Status bits as summarized in Table 4.1 above. Table 4.2 shows these bits and the status conditions they represent.

Table 4.2 – Error and Status Input Bit Details		
Register	Description	Condition
%I1	Emergency Stop Error	Emergency Stop input activated during move
%I2	Low End Limit Error	Low Limit input activated during move up
%I3	High End Limit Error	High Limit input activated during move down
%I4	Illegal Move Error	Previous commanded move was <u>not</u> possible
%I5	Motor Stalled Error	Motor is not moving in response to pulses
%I6	Spare Error (future use)	Not Used
%I7	Spare Error (future use)	Not Used
%I8	Power-Up / Watchdog Error	Always ON immediately after power-on or reset
%I9	Current Position Valid Status	Initially OFF; comes ON after successful Find Origin or Set Current Position command; set OFF again if motor is stopped suddenly or stalls
%I10	Pre-empted Move Resumable Status	Pre-empted move can be resumed to completion
%I11	Spare Status (future use)	Not Used
%I12	Spare Status (future use)	Not Used
%I13	Currently at Origin Position Status	Origin Input (Marker or Home depending on whichever is the configured Origin Source) is active
%I14	Motor is Accelerating Status	Motor is accelerating
%I15	Motor is Decelerating Status	Motor is decelerating
%I16	Motor is Moving Status	Motor is moving

At power-up or after a watchdog timer reset, all error and status bits are OFF except the Power-Up/Watchdog error bit, which will be ON.

If any error or status bit is ON, it means the corresponding condition is True. Note that if one of the error bits (%I1 - %I8) is ON, an error has occurred. Error bits stay ON till a Clear Error command (%Q14) is issued. No other commands can be issued while an error bit is ON. The status bits (%I9 - %I16) reflect various other STP100 status conditions and are not affected by the Clear Error command.



#### 4.2.2 Status Word Input Register Details (%AI1 - %AI4)

The STP100 used four (4) Analog Input (%AI) registers to indicate position status. These registers are summarized in Table 4.1 above.

##### 4.2.2.1 Motor Position (%AI1 and %AI2)

The first 2 status words (%AI1 and %AI2) are treated as a single 32-bit signed integer value representing the current Motor Position.

Motor Position is continuously updated (up or down) based on step pulses sent by the STP100 to the stepper motor translator drive. Note that at power up or after a watchdog timer reset, this value is set to zero and is considered invalid. This is reflected by the fact that the Current Position Valid Status bit (%I9) is OFF.

The Motor Position continues to be invalid until a Find Origin Up (%Q4), Find Origin Down (%Q5) or Set Current Position (%Q13) command is executed successfully. Until this happens, the STP100 does not obey the Move Absolute command (%Q9).

##### 4.2.2.2 Encoder Position (%AI3 and %AI4)

If an encoder is attached to the STP100, and if it is properly configured via Cscape, the %AI3 and %AI4 status words are treated as a single 32-bit signed integer value representing current Encoder Position.

Encoder Position is continuously updated (up or down) based on feedback pulses sent by the encoder to the STP100. Note that at power up or after a watchdog timer reset, this value is set to zero and is considered invalid. This is reflected by the fact that the Current Position Valid Status bit (%I9) is OFF.

If the STP100 is properly configured (see section 6.3), Encoder Position tracks Motor Position. Note that when Encoder Position doesn't match Motor Position exactly, a position validation error has been detected. There are several possible causes for this error (see section 6.3.2). Some position validation errors can't be avoided, which is why the STP100 supports an **Encoder Tolerance** configuration parameter.

#### 4.2.3 Command Word Output Register Details (%AQ1 - %AQ7 or %AQ1 - %AQ14)

By default, the STP100 uses seven (7) %AQ registers. If the **Enable Indexed Moves** box is checked on the STP100's Module Setup screen, then the STP100 uses a total of fourteen (14) %AQ registers. The %AQ command words act as qualifiers for the %Q command bits. Typically, the %AQ command words are set to appropriate values, and then one of the %Q command bits is changed from OFF to ON.

Normally, after the STP100 starts executing a command, the %AQ command words can be changed to prepare for the next command without affecting the command in progress. The exception to this rule is, that the Destination Position (%AQ1 and %AQ2) must not be disturbed during a Find Origin Up or Find Origin Down command, until either an error occurs, or the Current Position Valid status bit goes ON.

##### 4.2.3.1 Destination Position (%AQ1 and %AQ2)

The first two command words (%AQ1 and %AQ2) are treated as a single 32-bit signed integer value representing the Destination Position. For the Find Origin Up, Find Origin Down and Set Current Position commands, the Destination Position is the value to be loaded into Motor Position and Encoder Position when the command completes successfully.

For the Move Absolute command, the Destination Position is the absolute position to move to. For the Move Relative and Move Indexed commands, the Destination Position is the relative distance to move above or below the current position.

##### 4.2.3.2 Velocity Divisor (%AQ3)

This command word determines the resolution (multiplier) of the Base Velocity (%AQ4) and the Running Velocity (%AQ5) command words.

The velocity multiplier ( $M_v$ ), ranges from .01 pulses per second to 30 pulses per second and is calculated as follows:

$$M_v = \frac{600}{\%AQ3} \quad (\text{Pulses per second})$$

Table 4.3 shows some useful %AQ3 settings along with their resulting velocity multipliers and corresponding maximum velocities.

Table 4.3 - Example Velocity Multipliers		
Velocity Divisor (%AQ3)	Velocity Multiplier ( $M_v$ )	Maximum Velocity (Pulses Per Second) ( $M_v \times 8191$ )
20	30.0	245,730.0
60	10.0	81,910.0
120	5.0	40,995.0
300	2.0	16,382.0
600	1.0	8,191.0
1200	0.5	4,095.5

#### 4.2.3.3 Base Velocity (%AQ4)

This command word determines the velocity the STP100 starts at when executing one of the motion commands (%Q4 through %Q11).

A typical move starts at the Base Velocity and accelerate to the Running Velocity. Then, if the move ends normally, it decelerates from Running Velocity to Base Velocity, and then stops.

Also, near the end of a Find Origin Up or Find Origin Down command, the motor moves at a constant Base Velocity while searching for the exact Origin Position.

Actual Base Velocity ( $V_B$ ) depends on the Velocity Divisor (%AQ3) and is calculated according to the following formula:

$$V_B = \%AQ4 \times M_V = \%AQ4 \times \frac{600}{\%AQ3} \quad (\text{Pulses per second})$$

#### 4.2.3.4 Running Velocity (%AQ5)

This command word determines the maximum velocity the motor moves after the STP100 finishes accelerating.

The Running Velocity must be greater than the Base Velocity.

Actual Running Velocity ( $V_R$ ) depends on the Velocity Divisor (%AQ3) and is calculated according to the following formula:

$$V_R = \%AQ5 \times M_V = \%AQ5 \times \frac{600}{\%AQ3} \quad (\text{Pulses per second})$$

Note that if the Destination Position parameter is too short to accommodate the Acceleration Time and Deceleration Time parameters, the motor never reaches the Running Velocity and the move becomes triangular.

#### 4.2.3.5 Acceleration Time (%AQ6)

This command word determines the maximum time (in mS) spent accelerating from the Base Velocity to the Running Velocity during a move.

Note that if it is time to start decelerating before acceleration to the Running Velocity is complete, the acceleration time is decreased and the velocity profile becomes triangular.

Also note that the maximum useful value for Acceleration Time (%AQ6<sub>MAX</sub>) is dependent on the Base Velocity (%AQ4) and Running Velocity (%AQ5) according to the following formula:

$$\%AQ6_{MAX} \approx \frac{\%AQ5 - \%AQ4}{0.3} \quad (\text{Milliseconds})$$

#### 4.2.3.6 Deceleration Time (%AQ7)

This command word determines the maximum time (in mS) spent decelerating from the Running Velocity to the Base Velocity at the end of a move. If %AQ7 is zero, deceleration time is the same as the acceleration time set via %AQ6.

Note that if it is time to start decelerating before acceleration to the Running Velocity is complete, the deceleration time is decreased, and the velocity profile becomes triangular.

Also note that the maximum useful value for Deceleration Time (%AQ7<sub>MAX</sub>) is dependent on the Base Velocity (%AQ4) and Running Velocity (%AQ5) according to the following formula:

$$\%AQ7_{MAX} \approx \frac{\%AQ5 - \%AQ4}{0.3} \quad (\text{Milliseconds})$$

#### 4.2.3.7 Indexed Destination Position (%AQ8 and %AQ9)

These two command words (%AQ8 and %AQ9) are treated as a single 32-bit unsigned integer value representing the Indexed Destination Position.

The Indexed Destination Position contains the number of steps to continue in the current direction after the STP100 detects external activation of the Index Input during a Move Indexed command (%Q11).

#### 4.2.3.8 Indexed Deceleration Time (%AQ10)

This command word determines the time (in mS) spent decelerating from the Running Velocity to the Base Velocity at the end of a Move Indexed command (%Q11) *after* the Indexed Input has been asserted. If %AQ10 is zero, deceleration time is the same as the normal deceleration time set via %AQ7.

#### 4.2.3.9 Indexed Window Open Position (%AQ11 and %AQ12)

These two command words (%AQ11 and %AQ12) are treated as a single 32-bit unsigned integer value representing the Window Open Position during a Move Indexed command (%Q11).

The Indexed Window Open Position contains the number of steps past the beginning of an Indexed Move when the Index Input Window is opened. While the Index Input Window is open, the STP100 module monitors the external Index Input. While the Index Input Window is closed, the STP100 module ignores the external Index Input.

#### 4.2.3.10 Indexed Window Close Position (%AQ13 and %AQ14)

These two command words (%AQ13 and %AQ14) are treated as a single 32-bit unsigned integer value representing the Window Close Position during a Move Indexed command (%Q11).

The Indexed Window Close Position contains the number of steps past the beginning of an Indexed Move when the Index Input Window is closed. While the Index Input Window is open, the STP100 module monitors the external Index Input. While the Index Input Window is closed, the STP100 module ignores the external Index Input.

#### 4.2.4 Command Bit Output Register Details (%Q1 - %Q16)

The STP100 uses sixteen (16) Digital Output (%Q) registers, which are used as Commands. These registers are summarized in Table 4.1 above.

Most commands are positive (OFF-to-ON) edge sensitive. This means that the STP100 obeys the command only when the module sees the command bit transition from OFF to ON. The STP100 can require more than one OCS logic scan to detect a command bit but takes no more than 2 mS to start executing the command. The command bit must then be turned OFF for at least 2 mS before the next command (or the same command) can be again issued.

The Jog Up and Jog Down commands are level sensitive. The Jog commands start when the OFF-to-ON transition is recognized and remain running so long as the command bit stays ON. The Jog commands decelerate and stop when the ON-to-OFF transition is recognized.

The Power Up / Watchdog Error Status bit (%I8) is always ON immediately after Power-On or reset. Therefore, the first command issued *must* be the Clear Errors command (%Q14).

Also, some commands are ignored depending on the state of other status bits. For example, if the Moving Status bit (%I16) is ON, the only legal commands are Decelerate and Stop (%Q15) and Immediate Stop (%Q16).

If more than one command bit goes active during any one CPU Scan Time, the command with the highest bit number takes priority. Note that this gives the Immediate Stop command (%Q16) the highest priority.

NOTES

## CHAPTER 5: COMMANDS

### 5.1 General

Chapter Five describes the commands available for the STP100 and their operations.

### 5.2 Issuing Commands

Commands are issued by setting the appropriate bit in the Command Bit Output registers.

Commands can be issued only under strict conditions as described in the individual command descriptions that follow.

The STP100 does not accept commands if any of the Error Status bits are ON. The exception is, of course, the Clear Errors command (%Q14). If an error occurs, the only command that can be issued is the Clear Errors command. Note that immediately following a power-up or reset, the Power-Up / Watchdog Error bit is ON. Thus, the first command issued after a power on or reset *must* be the Clear Errors command. This is a safety feature, which prevents the STP100 from running until the application program is in control, and specifically issues the Clear Errors command.

### 5.3 Available Commands

#### 5.3.1 Clear Error(s) Command

Command Bit:	%Q14
Status Bits Required:	None
Status Bits Affected:	%I1 through %I8
Status Words Required:	None
Status Words Affected:	None
Command Words Required:	None

This command is used to clear errors previously detected by the STP100. When this command is issued, all Error bits (%I1 through %I8) are cleared (turned OFF).

Note that when an Error bit is ON, the STP100 does not obey any other commands till the error is cleared via the Clear Error(s) command.

The Power Up / Watchdog Error bit (%I8) provides a safety interlock. This bit is ON immediately after power-ON, reset or watchdog timeout. The Stepper Controller does not accept any other commands until this bit is cleared using the Clear Errors command. Therefore, the Clear Errors command must be the *first* command issued after a power-ON or reset.

### 5.3.2 Find Origin Up and Find Origin Down Commands

Command Bits:	%Q4 and %Q5
Status Bits Required:	%I1 through %I8 and %I16 must be OFF
Status Bits Affected:	%I1 through %I5, %I9 and %I13 through %I16
Status Words Required:	None
Status Words Affected:	%AI1 through %AI4
Command Words Required:	%AQ1 through %AQ6

These commands are used to search for the Origin Reference Position as follows:

- %Q4 Searches for Origin Position in the Up direction
- %Q5 Searches for Origin Position in the Down direction

In the following discussion, **Origin Source** is either the **Home Input** or the **Marker Input**, depending on how the STP100 module is configured (see section 3.2.3). When searching for Origin Position, the following search sequence takes place:

1. The Current Position Valid status bit (%I9) is turned OFF (position not valid).
2. The motor is moved normally (starts at Base Velocity and accelerates to Running Velocity) in the selected direction (up for %Q4 or down for %Q5).
3. When the **Origin Source** becomes active, motion is stopped immediately.
4. If the **Simple Method** radio button was selected during configuration, skip to step 8. **NOTE:** The **Simple Method** variation assumes that the user-programmed Running Velocity is slow enough to prevent overshoot.
5. Otherwise, just in case we shot right past the Origin, the motor is run at Base Velocity in the opposite direction till the **Origin Source** is active again.
6. Motion then continues in the same direction as in step 5 above, (still at Base Velocity), till the **Origin Source** is inactive for 50 mS.
7. Then the direction is reversed again, and the motor is moved at Base Velocity till the **Origin Source** is active, at which time the motor stops precisely at the Origin Position.
8. Destination Position is copied into Motor Position and into Encoder Position, and the Current Position Valid Status bit (%I9) is turned ON.

If the **Limit Switch Qualified** box was checked during configuration, step 3 above is changed as follows:

3. When the End Limit input for the direction we're moving becomes active, motion is stopped immediately.

**NOTE:** The **Limit Switch Qualified** variation is most useful when the **Origin Source** is configured to be the **Marker Input**. Since the Marker on a rotary encoder typically occurs several times during a full stroke move, this technique allows the Marker, which occurs closest to the Limit Switch, to be used as the Origin Position.

For best results, the Marker-to-Limit-Switch relationship needs to be mechanically adjusted such that the Marker occurs at approximately one-half of the encoder's revolution away from the Limit Switch.



### 5.3.3 Jog Up and Jog Down Commands

Command Bits:	%Q6 and %Q7
Status Bits Required:	%I1 through %I8 and %I16 must be OFF
Status Bits Affected:	%I1 through %I5 and %I13 through %I16
Status Words Required:	None
Status Words Affected:	%AI1 through %AI4
Command Words Required:	%AQ3 through %AQ7

These commands are used to perform manual jogging as follows:

- %Q6 Starts a manual jog move in the Up direction
- %Q7 Starts a manual jog move in the Down direction

When one of the Jog Command bits goes ON, the motor starts in the selected direction at the Base Velocity and accelerates to the Running Velocity.

The motor continues to move at Running Velocity until the Jog Command bit goes OFF again. At that time, the motor decelerates from Running Velocity back down to Base Velocity, and then stop.

If the Jog Command bit transitions from ON to OFF before the motor reaches Running Velocity, the motor acceleration and deceleration times is decreased, and the velocity profile is triangular.

#### 5.3.4 Move Relative and Move Absolute Commands

Command Bits:	%Q8 and %Q9
Status Bits Required:	%I1 through %I8 and %I16 must be OFF; %I9 must be ON for %Q9 command
Status Bits Affected:	%I1 through %I5 and %I13 through %I16
Status Words Required:	%AI1 and %AI2 used by %Q9 command
Status Words Affected:	%AI1 through %AI4
Command Words Required:	%AQ1 through %AQ7

These commands perform a relative or absolute move as follows:

%Q8	Performs a relative move
%Q9	Performs an absolute move

Both of these commands perform a programmed move in the up or down direction to a relative target position.

If doing a relative move (%Q8), the relative target position is taken directly from Destination Position (%AQ1 and %AQ2) and it **is not** necessary for the Current Position Valid Status bit (%I9) to be On. The direction of the move is determined by the Destination Position sign (+ for move up or - for move down).

If doing an absolute move (%Q9), the relative target position is calculated as the difference between Destination Position (%AQ1 and %AQ2) and Motor Position (%AI1 and %AI2), and therefore it **is** necessary for the Current Position Valid Status bit (%I9) to be On. The direction of the move depends on whether Destination Position is higher (move up) or lower (move down) than Motor Position.

Normally, the move starts at Base Velocity and accelerates to Running Velocity until it is time to decelerate back down to Base Velocity, and then stop. This type of move is said to have a trapezoidal velocity profile.

If it is time to start decelerating (before accelerating to **Running Velocity** has completed), the motor starts decelerating at that point. In this case, the acceleration and deceleration times are decreased, and the velocity profile becomes triangular.

Optionally, the End Limit Inputs can be used to start relative and absolute moves. The High Limit Input (HILIM-) can be used to start moves in the Up direction while the Low Limit Input (LOLIM-) can be used to start moves in the Down direction. To accomplish this, the ladder program needs to be set up the %AQ values as for a normal relative or absolute move, and the appropriate End Limit Input needs to be activated before %Q8 or %Q9 is turned ON. In this case, the actual move does not start until the End Limit input is deactivated.

5.3.5 *Move Indexed Command*

Command Bit:	%Q11
Status Bits Required:	%I1 through %I8 and %I16 must be OFF
Status Bits Affected:	%I1 through %I5 and %I13 through %I16
Status Words Required:	None
Status Words Affected:	%AI1 through %AI4
Command Words Required:	%AQ1 through %AQ14

This command performs an Indexed Move, which is similar to a Relative Move (%Q8), except that the final destination can be modified if the external Index Input becomes active. This modified behavior is determined by the user-programmed values in %AQ8 through %AQ14. Note that %AQ8 through %AQ14 are ignored by all other STP100 commands.

For details on %AQ8 through %AQ14 values, refer to Table 4.1 and to Section 4.2.3 in Chapter 4.

As stated above, the Indexed Move is similar to the Relative Move. In fact, if the Index Input does not become active during an Indexed Move, it behaves exactly like a Relative Move.

The purpose, of the Move Indexed command, is to provide the ability to synchronize motor movement with an external mechanical reference point. This reference point (or index) is provided to the STP100 module via the Index Input. The Index Input will only be processed if it occurs during a user-specified window. When the Index Input is accepted, the STP100 then switches to an alternate destination and an alternate deceleration time.

When the %Q11 bit goes ON, the motor starts moving just as it would for a Relative Move. However, during the time the Indexed Window is open (determined by %AQ11 through %AQ14), the STP100 monitors the Index Input. If the Index Input becomes active while the Indexed Window is open, a new end point for the move is determined. This new end point is defined to be N more steps (in the same direction) beyond the point at which the Index Input became active, where N is the Indexed Destination Position (%AQ8 and %AQ9) value. In addition, if %AQ10 is not zero, it sets a new deceleration point called the Indexed Deceleration Time.

The resulting Indexed Move can be longer or shorter than the default Relative Move. The motor must attain Running Velocity before the window is opened. If the move does not reach Running Velocity the window won't be opened, and the Index Input is not accepted.

If the Relative Move reaches the point to begin decelerating before the Index Input is activated, the window is closed and Index Input is not accepted.

The STP100 must be specifically configured to accept Indexed Moves (see section 3.2.3). Configuring an STP100 for Indexed Moves increases the number of required Command Word Output Registers (%AQ) registers from seven (7) to fourteen (14).

**NOTE:** A Move Indexed command has one more difference compared to other move commands. In applications where all moves are in the same direction, the **DIR+** and **DIR-** outputs can be used as **MOVING+** and **MOVING-** outputs, indicating *Move in Progress* to some external device.

At the start of a Relative, Absolute or Indexed move, **DIR+** and **DIR-** are set according to the direction of the move. At the end of a Relative and Absolute move, the **DIR+** and **DIR-** outputs do not change state. However, at the end of an Indexed Move, **DIR+** and **DIR-** are always taken Low and High respectively. Therefore, when an Indexed Move starts in the Up direction, **DIR+** and **DIR-** start out High and Low respectively, and then switch to Low and High respectively when the move completes.

### 5.3.6 Repeat Move Command

Command Bit: %Q12

The Repeat Move command is not really a command at all but can be used to automatically repeat a Relative Move (%Q8) or an Indexed Move (%Q11) command.

When a Relative Move or Indexed Move completes normally, the STP100 checks the %Q12 bit. If the %Q12 bit is ON, the STP100 automatically repeats the move just completed. As long as the %Q12 bit stays ON, the move is repeated immediately after completion of each move.

If the %Q12 bit is turned OFF during a move, the current move will still complete normally, but it will not be repeated.

### 5.3.7 Resume Move Command

Command Bit: %Q10

Status Bits Required: %I1 through %I8 and %I16 must be OFF  
%I10 must be ON

Status Bits Affected: %I1 through %I5, %I10 and %I13 through %I16

Status Words Required: None

Status Words Affected: %AI1 through %AI4

Command Words Required: None

This command can be used to resume a previously pre-empted Relative Move or Absolute Move.

If a Move Relative or Move Absolute command was previously pre-empted by a Decelerate and Stop command (%Q15), and no other commands have been issued since then, the Pre-empted Move Resumable Status bit is ON.

In this case, the Resume Move command can be issued to restart the pre-empted move from where it left off. Of course, this action turns the Pre-empted Move Resumable Status bit back OFF.

Note that the resume logic is such that a move can be pre-empted and resumed any number of times until one of the following occurs:

1. The move reaches its originally programmed relative target position,
2. An error occurs (such as End Limit or Emergency Stop),
3. Some command other than %Q10 is issued after a move is pre-empted.

The Resume Move command is especially useful for manually-assisted programmed moves.

For example, the machine operator can trigger a Move Absolute command by pressing a footswitch. If the footswitch continues to be pressed, the move continues until it reaches its programmed target position.

However, at the operator's option, the footswitch can be released causing a Decelerate and Stop command to be issued. There are a number of reasons why the operator might decide to do this, such as to make a mechanical adjustment or to manually reposition the material being moved.

Then, when the operator is ready, the footswitch can be pressed again sending a Resume Move command to the STP100 to complete the motion.

### 5.3.8 Set Current Position Command

Command Bit:	%Q13
Status Bits Required:	%I1 through %I8 and %I16 must be OFF
Status Bits Affected:	%I9
Status Words Required:	None
Status Words Affected:	%AI1 through %AI4
Command Words Required:	%AQ1 and %AQ2

This command is used to manually set the current position.

When the Set Current Position command is issued, Destination Position (%AQ1 and %AQ2) is copied into Motor Position (%AI1 and %AI2) and Encoder Position (%AI3 and %AI4), and the Current Position Valid Status bit (%I9) is turned On.

This command can be used in conjunction with the Jog Up and Jog Down commands as an alternative to the Find Origin Up and Find Origin Down commands for finding and setting a reference position.

There is no motor movement associated with this command.

### 5.3.9 Decelerate and Stop Command

Command Bit:	%Q15
Status Bits Required:	None
Status Bits Affected:	%I10, %I13 through %I16
Status Words Required:	None
Status Words Affected:	%AI1 through %AI4
Command Words Required:	None

This command causes the controller to decelerate and stop the motor.

If the motor is moving when this command is issued, the motor decelerates till it reaches the Base Velocity, and then it stops.

If this command pre-empts a Move Relative or Move Absolute command, the Pre-empted Move Resumable Status bit (%I10) is turned ON, unless an error occurs. In this case, the original move can be resumed from where it left off by issuing a Resume Move command (%Q10).

#### 5.3.10 Immediate Stop Command

Command Bit:	%Q16
Status Bits Required:	None
Status Bits Affected:	%I9, %I13 through %I16
Status Word Required:	None
Status Word Affected:	%AI1 through %AI4
Command Words Required:	None

This command is used to cause the motor to stop immediately. When this command is issued, the motor stops as quickly as possible.

If the motor was moving, the Current Position Valid Status bit (%I9) is turned OFF.

## CHAPTER 6: USING ENCODERS

### 6.1 General

Chapter Six details the use of optional encoder feedback with the STP100.

### 6.2 Adding an Encoder

The encoder must be of a type accepted for use with the motor selected. Read the information supplied with the motor for further instructions on selecting and installing an encoder on the motor.

The STP100 can be configured for one of three encoder types – None, Quadrature or Up/Down. Absolute encoders and resolvers are not compatible with the STP100. If the Encoder Type is None, the Encoder Position Status Word registers (%A13 and %A14) need to be ignored, and the Motor Stalled Error bit (%I5) never goes ON. Otherwise, if the Encoder Type is configured for Quadrature or Up/Down, the Encoder Position Status Word registers are updated as a result of feedback pulses from the Encoder to the STP100, thus allowing Motor Position validation and Motor Stall detection.

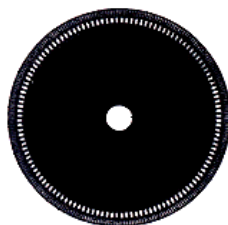


Figure 7.1 - Typical Encoder Disk

A typical Optical Encoder contains a glass or plastic disk in the Encoder Assembly. The encoder is mechanically attached to the motor such that the encoder disk and motor shaft turn together. Typically, an optical sensor fits over the edge of the encoder disk. As the disk turns, the sensor generates the A and B pulses, which are amplified to TTL or RS-485 levels, and then are sent to the STP100 through short cables.

#### 6.2.1 Quadrature Encoder

The Quadrature Encoder is the most common position feedback device used in motion control. This type of encoder outputs two square wave signals (A and B) which are 90° out of phase with each other. The STP100 determines the direction of motion based on which signal lags behind the other as shown in Figure 7.2 below.

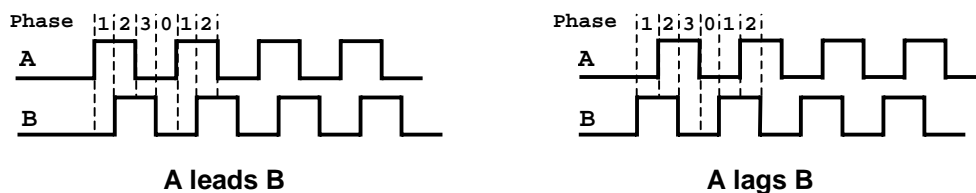


Figure 7.2 – Quadrature Encoder Signals

As can be seen in Figure 7.2, there are two possibilities of signal timing: A leads B, and A lags B. These two possibilities are set by the direction of the motor. For example, if the motor is moving in the forward direction, then A leads B. If the motor is moving in reverse, then A lags B.

The STP100 counts these encoder pulses to verify how far the motor has traveled. If A leads B, then the count is incremented. If A lags B, then the count is decremented. Also, a Quadrature Encoder's resolution can be effectively doubled or quadrupled by the STP100's quadrature decoding hardware.

A Quadrature Encoder can also provide a third signal, called a Marker. This signal, usually generated once per revolution of the motor's shaft, can be used by the STP100 as a reference position when connected to the STP100's Marker Input. This also requires that the STP100's Marker Input be configured as the Origin Source, to allow the Marker Input to be used as a reference during Find Origin Up and Find Origin Down commands.

### 6.2.2 Up / Down Encoder

The Up / Down Encoder also provides A and B signals but not both at the same time. Typically, if the motor is turning clockwise, the A output is active. If the motor is turning counterclockwise, the B output is active. The STP100 increments the position count when A is active, and decrements the position count when B is active.

An STP100 configured for an Up / Down Encoder is especially useful for unidirectional motion control, in which some mechanical event provides the feedback, such as a proximity detector monitoring gear teeth.

## 6.3 Configuring the Encoder

After configuring Encoder Type as either Quadrature or Up / Down, appropriate values should be entered for Encoder Multiplier, Encoder Divisor and Encoder Tolerance. In addition, the Enable Stall Detection box can be checked, if desired.

### 6.3.1 Configuring Step Pulse to Encoder Feedback Ratio

Before encoder feedback can be used for Motor Position validation or Motor Stall detection, the STP100 must know the ratio of motor step pulses to encoder feedback pulses. This is accomplished by setting the Encoder Multiplier and the Encoder Divisor to values, which are appropriate for the user-supplied hardware.

Step Resolution, specified in micro-steps per revolution, indicates the number of step pulses which must be sent by the STP100, to move the stepper motor one revolution. This value is determined by the connected translator drive, and is switch or jumper selectable on some drives.

Encoder Resolution, specified in lines per revolution, indicates the number of feedback pulses the encoder sends to the STP100 during one revolution of motion. This value is determined by the encoder itself.

For a given Step Resolution and Encoder Resolution, the following formula can be used to determine the proper settings for Encoder Multiplier and Encoder Divisor.

$$\frac{\text{EncoderMultiplier}}{\text{EncoderDivisor}} = \frac{\text{Step Resolution}}{\text{Encoder Resolution}}$$

Where: Encoder Multiplier is any value from 1 to 255  
Encoder Divisor is any value from 1 to 16

If more than one combination of Encoder Multiplier and Encoder Divisor satisfies the formula, choose the combination with the lowest values for Encoder Multiplier and Encoder Divisor (reduce the fraction).



For example:

Assume that an Encoder Resolution of 1000 lines per revolution is used. Further, it is assumed the encoder is mechanically connected to the stepper motor shaft and is electrically connected to the STP100's Encoder A and Encoder B inputs.

For this example, the following table shows the proper configuration settings for Encoder Multiplier and Encoder Divisor for 16 typical Step Resolutions:

Table 6.1 – Example Encoder Multiplier and Divisor Values					
Step Resolution	Encoder Multiplier	Encoder Divisor	Step Resolution	Encoder Multiplier	Encoder Divisor
200	1	5	20,000	20	1
400	2	5	21,600	108	5
1,000	1	1	25,000	25	1
2,000	2	1	25,400	127	5
5,000	5	1	25,600	128	5
10,000	10	1	36,000	36	1
12,800	64	5	50,000	50	1
18,000	18	1	50,800	254	5

### 6.3.2 Configuring Encoder Tolerance

If the Encoder Tolerance is set to 0, position validation is disabled. Otherwise, if Encoder Tolerance is set to a number from 1 to 255, Encoder Feedback is used to validate current position. As such, the STP100 continuously compares the Encoder Position value (%AI3 and %AI4) to the Motor Position value (%AI1 and %AI2). If the difference exceeds the configured Encoder Tolerance value, a position validation error has been detected, and the STP100 turns the Current Position Valid Status bit (%I9) OFF.

An invalid position during a move does not automatically stop the move. It is up to the ladder program to monitor the Current Position Valid bit, and then to issue the Immediate Stop command, if desired.

In an ideal motion control loop, Encoder Position and Motor Position always match exactly. However, when Encoder Position and Motor Position become skewed, it means that one or more of the following errors has occurred:

1. A change in motor direction produced a backlash caused by the mechanical linkage between the motor and the encoder.
2. A resolution error has occurred, because the encoder is less precise than the motor micro-stepping rate. In other words, Step Resolution is greater than Encoder Resolution. This is quite common for Step Resolutions greater than 2000 steps per revolution. For most motors, Step Resolutions greater than 2000 do not afford better positioning accuracy, but merely offer smoother operation. In these cases, it does not make sense to spend the extra money for an extremely fine-pitched encoder.
3. The Step Resolution exceeds the motor's ability to accurately position its rotor. For example, most stepper motors have an accuracy of 1 part in 2000, which means a Step Resolution greater than 2000 has little effect on accuracy, but only contributes to smoother operation.
4. The motor missed some step pulses or stalled because of low or mid-frequency resonance.
5. The motor missed some step pulses or stalled, because the programmed Acceleration Time or Deceleration Time was too low to properly overcome the mechanical inertia of the system.

6. Some external force changed the position of the motor. For example, something caught in the machinery does not let the motor move the load as requested.

### 6.3.3 *Configuring Motor Stall Detection*

If desired, **Motor Stall Detection** can be enabled by checking the **Enable Stall Detection** checkbox on the STP100's configuration screen. When this option is enabled, the STP100 monitors **Encoder Feedback** pulse velocity to determine whether or not the motor has stalled.

In particular, if the measured move velocity falls to less than 10% of the theoretical move velocity, then a Motor Stalled error has been detected. When this happens, the STP100 stops sending step pulses and turns the Motor Stalled Error Status bit (%I5) ON.

## CHAPTER 7: WIRING

### 7.1 General

Chapter Seven provides example wiring diagrams for interconnection between the STP100 and external equipment, such as stepper motor translator drives, encoders and switches.

### 7.2 Translator Drives

The STP100 does not provide the necessary signals to drive a stepper motor directly. A *Translator Drive* is required. The Translator Drive can be in a separate enclosure, or it can be contained within the motor housing itself. The Translator Drive accepts Step and Direction signals from the STP100 and generates the signals necessary to drive the motor.

The STP100 is compatible with three common Translator Drive electrical interfaces: differential (RS-485), 5VDC positive going, and 5VDC negative going. Note that 5VDC signals, can be also be referred to as *TTL-Compatible* signals. Figures 7.1, 7.2 and 7.3 show the proper wiring for the 3 different interface types. Note that the Step and Direction signals are not isolated from common ground.

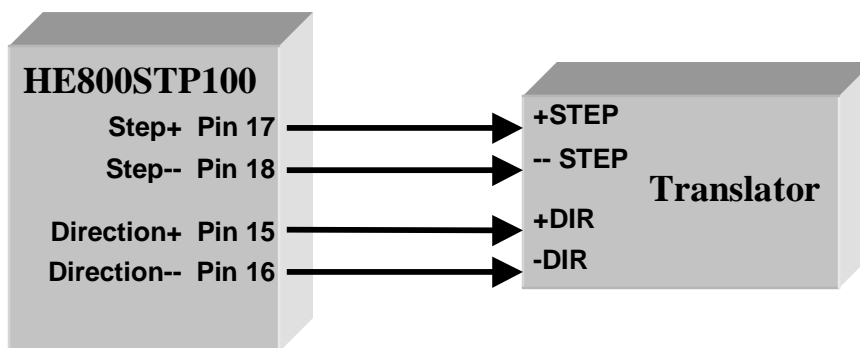


Figure 7.1 - Interfacing to a Translator Drive Using Differential Signals

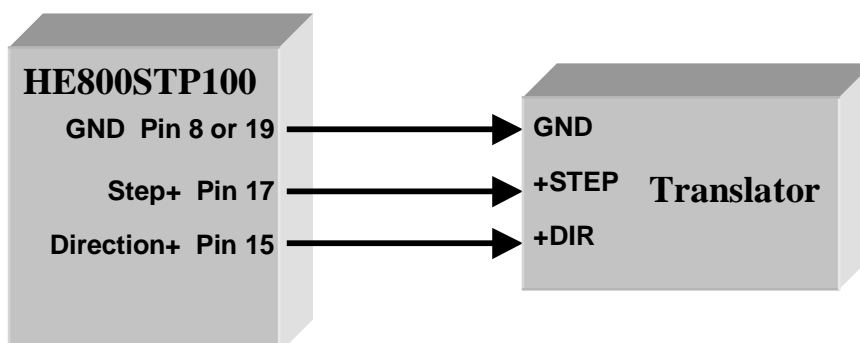


Figure 7.2 - Interfacing to a Translator Drive Using Positive 5VDC Signals

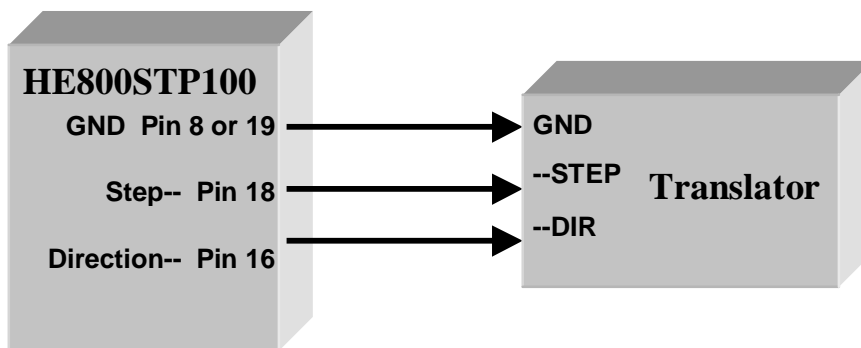


Figure 7.3 - Interfacing to a Translator Drive Using Negative 5VDC Signals

### 7.3 Encoders

Encoders are optional devices. The STP100 is compatible with encoders which produce either differential signals or 5 VDC positive-going (TTL-compatible) signals.

Note that the Encoder signals are not isolated from common ground.

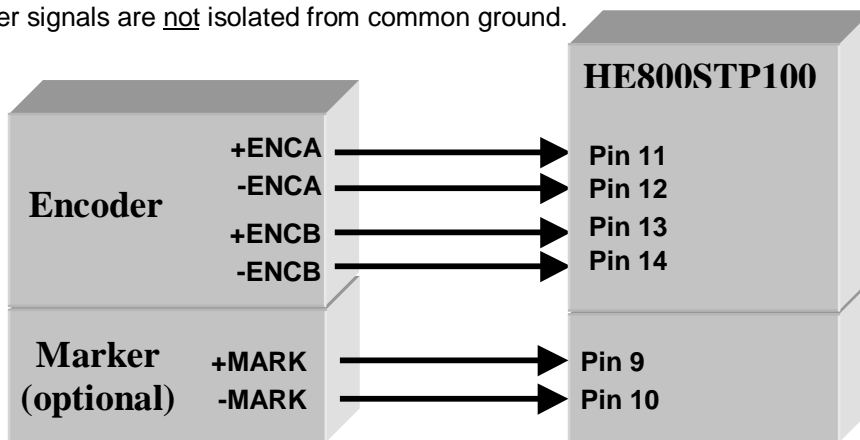


Figure 7.4 - Interfacing to an Encoder with Different Outputs

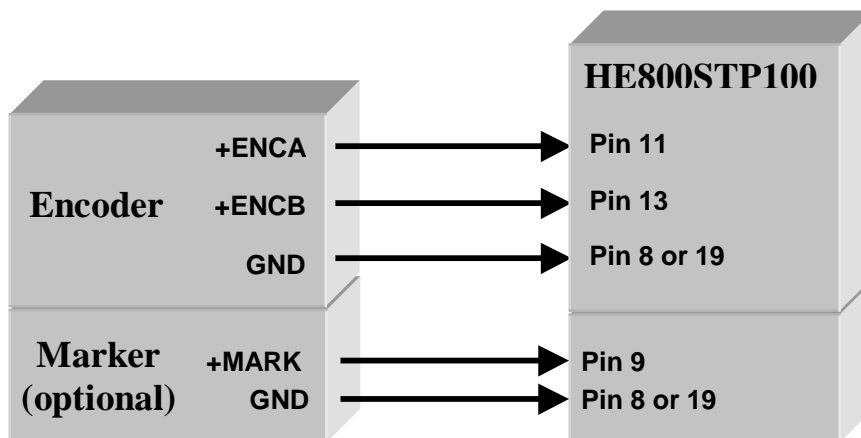


Figure 7.5 - Interface to an Encoder with Positive 5VDC Signals

## 7.4 Isolated Switch Inputs

The STP100 accepts several different isolated switch inputs:

Table 7.1 - User-Supplied Switch Inputs			
Pin	Signal	Marking	Description
1	Isolated Common	IC	Isolated Common
2	ESTOP+	ES	Emergency Stop, Active High (Open), 24VDC pull-up
3	LOLIM-	LO	Low Limit, Active Low (Closed) 24 VDC pull-up
4	HILIM-	HI	High Limit, Active Low (Closed) 24 VDC pull-up
5	HOME-	HO	Home, Active Low (Closed) 24 VDC pull-up
6	INDEX-	IN	Index, Active Low (Closed) 24 VDC pull-up
7	Isolated Common	IC	Isolated Common

All switch inputs are optically isolated to 500 VDC. This is accomplished by the following circuit inside the STP100. (Circuitry inside the dotted line is physically located inside the SmartStack module.) **Home**, **Low Limit**, **High Limit** and **Index** can accept either mechanical switch closures or NPN-type proximity switches.

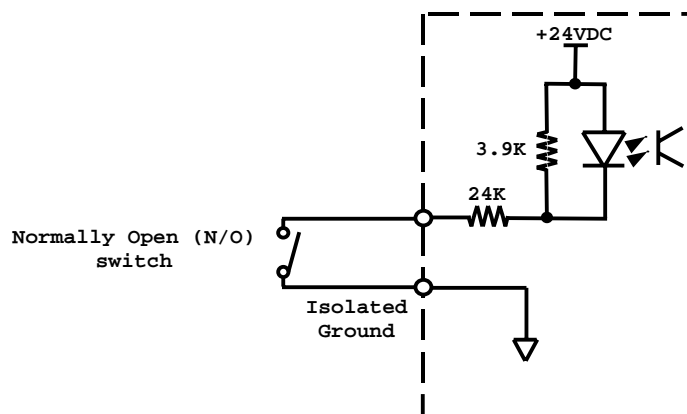


Figure 7.6 - Isolated Input Schematic

**Home**, **Low Limit**, **High Limit**, and **Index** are active low signals. A Normally Open (N/O) switch is required to switch these lines to ground when the switch is activated.

**Emergency Stop** is an active high signal. A Normally Closed (N/C) switch is required to hold this line to a LOW (grounded) condition for normal operation of the system.

NOTES

## INDEX

Acceleration Time .....	27	Motor Stall Detection, Configuring .....	42
Addressing .....	17	Multiplier and Divisor Value Examples .....	41
Base Velocity .....	27	Types of Encoders .....	39
Command Bit Output Register .....	29	Error and Status Input Bit Register .....	24
Command Word Output Registers .....	26	External Wiring .....	16
Commands .....	31	Features .....	9
Available Commands .....	31	<b>I/O Pin-Out</b> .....	16
Clear Errors .....	31	I/O Register Assignments .....	21
Decelerate and Stop .....	37	Indexed Deceleration Time .....	28
Find Origin Up / Find Origin Down .....	32	Indexed Window Close Position .....	28
Immediate Stop .....	38	Indexed Window Open Position .....	28
Jog Up and Jog Down .....	33	Indicators .....	12
Move Indexed .....	35	Installation .....	15
Move Relative and Move Absolute .....	34	Isolated Inputs .....	11
Repeat Move .....	36	Motion Profiles .....	12
Resume Move .....	36	Motor Position .....	25
Set Current Position .....	37	Quadrature Encoder .....	39
Configuration .....	19	Register Details .....	24
Using Cscape .....	19	<b>Register Summary</b> .....	23
Deceleration Time .....	28	Running Velocity .....	27
Destination Position .....	26	Signal Descriptions .....	11
Differential Inputs .....	11	Specifications .....	10
Differential Outputs .....	12	Up / Down Encoder .....	40
Encoder Position .....	25	Velocity Divisor .....	26
Encoders .....	39	<b>Velocity Multipliers (Examples)</b> .....	26
Adding .....	39	Wiring .....	43
Configuration .....	40	Isolated Switch Inputs .....	45
Encoder Tolerance, Configuring .....	41	Translator Drives .....	43

