



SmartMod

+/-10V Analog Input Module


HE359ADC107 / HE359ADC207

16-Bit Resolution



1 SPECIFICATIONS



| | ADC107 | ADC207 | | ADC107 | ADC207 |
|-------------------------------|---|---|--|-----------------------------------|--|
| Number of Channels | 4 | 8 | | Conversion Time (PLC Update Rate) | Determined by Communications w/OCS |
| Input Ranges | +/-10V | | | Terminal Type | Screw Type, Removable |
| Resolution | Approximately 16-Bit | | | Storage Temp. | -40° to 85° Celsius |
| Input Impedance | 1MOhm | | | Operating Temp. | -10° to 60° Celsius |
| Linearity | +/-0.1% | | | Relative Humidity | 5 to 95% Non-condensing |
| External Power Supply Voltage | 10-30Vdc | | | Dimensions WxHxD | 17.5mm x 100mm x 120mm 0.69" x 3.94" x 4.72" |
| Required Power (Steady State) | 30mA @ 24Vdc, typical | | | Weight | 150g (6 oz.) |
| Required Power (Inrush) | Negligible | | | Communications | Modbus/RTU (binary) RS-485 half duplex |
| Isolation | 2000Vac for 60 seconds (Input/Power & Input/Comms) | | | Default Comms. Parameters | 38400 baud, N, 8, 1, no h/s Default Modbus ID 1 |
| | | | | Supported Modbus Commands | 1,2,3,4,5,6,8,15,16 |
| CE & UL Compliance | | See Compliance Table at http://www.heapg.com/Support/compliance.htm | | | |

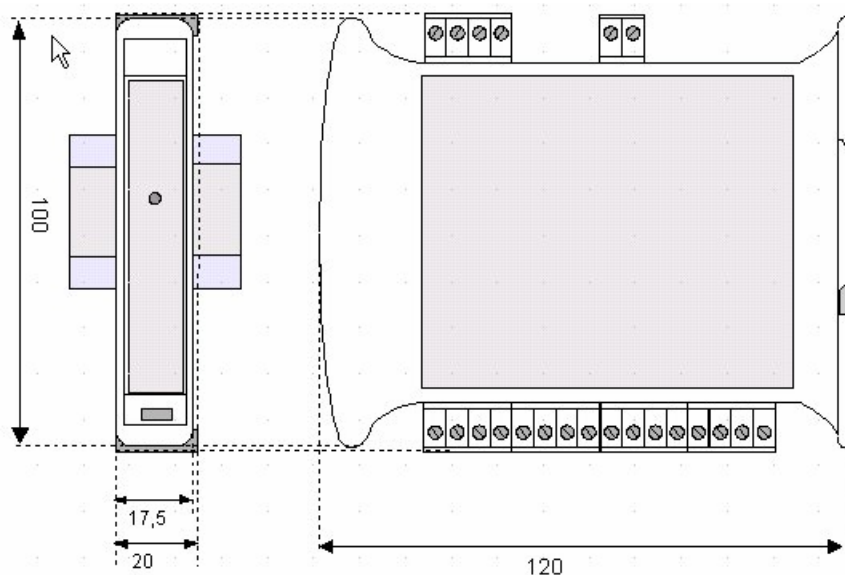

Dimensions in inches are 0.69"W x 3.95"H x 4.72"D


Note: Number of I/O terminal connections vary from model to model

2 WIRING – I/O

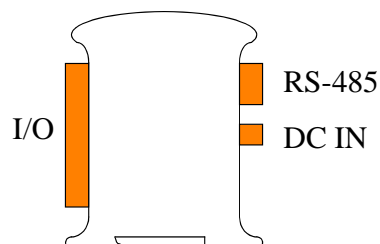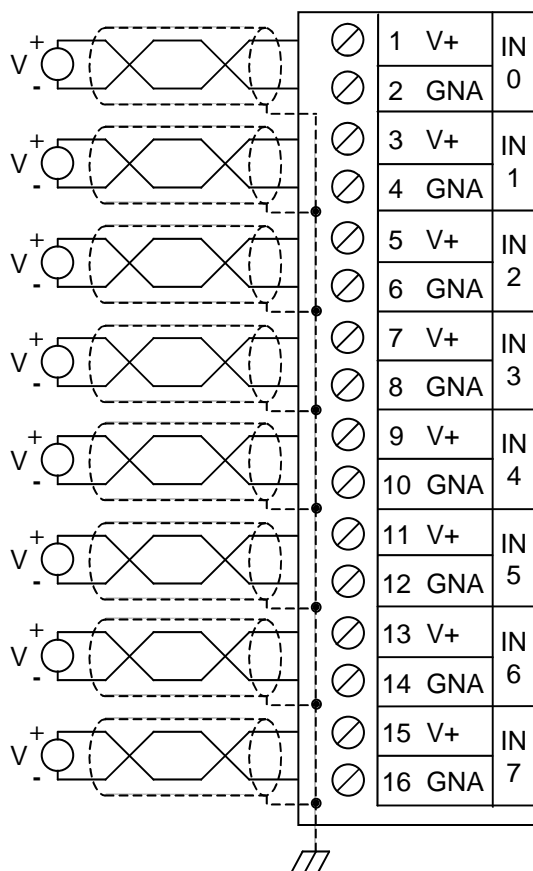


| Pin # | ADC107 | ADC207 |
|-------|--|---------------|
| 1 | INPUT 0+ | INPUT 0+ |
| 2 | ANALOG COMMON | ANALOG COMMON |
| 3 | INPUT 1+ | INPUT 1+ |
| 4 | ANALOG COMMON | ANALOG COMMON |
| 5 | INPUT 2+ | INPUT 2+ |
| 6 | ANALOG COMMON | ANALOG COMMON |
| 7 | INPUT 3+ | INPUT 3+ |
| 8 | ANALOG COMMON | ANALOG COMMON |
| 9 | Only Terminals 1 through 8 are present on the ADC107 model | INPUT 4+ |
| 10 | | ANALOG COMMON |
| 11 | | INPUT 5+ |
| 12 | | ANALOG COMMON |
| 13 | | INPUT 6+ |
| 14 | | ANALOG COMMON |
| 15 | | INPUT 7+ |
| 16 | | ANALOG COMMON |

WIRING – RS-485

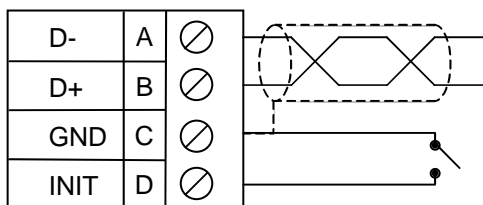

WIRING – DC IN

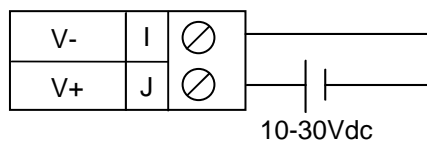


Notes:

Both ends of the RS-485 network should be terminated with a 100ohm, 1/4W, 1% resistor. Many OCS controllers feature dip switches or jumpers which enable appropriate termination if the OCS is located on a network end..

Init Default Setup:

1. Install jumper between INIT and GND terminals of the RS-485 port.
2. Apply power to Smartmod unit.
3. Read parameter words to see current parameters.
4. Write changes if necessary.



The INIT Default RS485 Settings Are:

Modbus ID = 1

Baud rate = 9600

Parity = None

Stop Bits = 1

3 CONFIGURATION DATA

SmartMod Configuration settings are mapped into Modbus Register space. This configuration data may be modified with any Modbus/RTU Master device. For convenience, Horner APG has developed a variety of Cscape application files which allow an OCS (Xle, NX, LX, QX) to act as a SmartMod configurator. Initial configuration of SmartMod module should be done on an individual basis, since all modules come from the factory with a default Modbus ID of 1. Once each module on the network has its own unique Modbus ID, further configuration adjustments can be made with the entire network powered.

All configuration parameters listed below (except 40012 Channel Enable) are stored in EPROM. That means they should not be constantly rewritten.

| Configuration Parameters – Registers 40001 through 40013 | | | | |
|--|--------------------------------|---------------------------------------|-----|------------------------------|
| Modbus Register | Description | Min | Max | Default |
| 40001-40005 | Reserved | | | |
| 40006 | Communications Parameters | See Table | | 38.4kbaud, N, 8, 1, RTU Mode |
| 40007 | Modbus ID | 1 | 255 | 1 |
| 40008 | Rx/Tx Delay (in 2mS steps) | 0 | 255 | 0mS |
| 40009 | Watchdog Timer (in 0.5s steps) | 0 | 255 | 10 (5s) |
| 40010 | Modbus Coil Data | Not Configuration Data – See I/O Data | | |
| 40011 | Input Type | 4 | 4 | 4 (+/-10V) |
| 40012 | Channel Enable | See Table | | 255 (Channels 1-8 enabled) |
| 40013 | Reserved | | | |

| Register 40006 (Communications Parameters) Bit Definition | | | | | | |
|---|----------------|--------|---------|-----------------|-----------|------------|
| Bits 7-15 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 |
| Unused | Mode | Parity | | Data Bits | Baud Rate | |
| | 0 = ASCII Mode | Value | Meaning | 0 = 7 Data Bits | Value | Meaning |
| | | 0 | Mark | | 0 | 1200 baud |
| | | 1 | Even | | 1 | 2400 baud |
| | 1 = RTU Mode | 2 | Odd | 1 = 8 Data Bits | 2 | 4800 baud |
| | | 3 | Space | | 3 | 9600 baud |
| | | | | | 4 | 19200 baud |
| | | | | | 5-7 | 38400 baud |

| Register 40012 (Channel Enable) Bit Definition | | | | | | | | |
|--|-------------------|---------|---------|---------|---------|---------|---------|---------|
| Bit 8-15 | Bits 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
| Unused | Input 7 | Input 6 | Input 5 | Input 4 | Input 3 | Input 2 | Input 1 | Input 0 |
| | 0 = Disable Input | | | | | | | |
| | 1 = Enable Input | | | | | | | |

4 INPUT / OUTPUT DATA

SmartMod Analog I/O utilizes both Modbus Registers (40001-40030) and Coils (1-11). It is possible to access all data using Registers only, because the Coils can be accessed through Register 40010.

The following tables lists all Modbus I/O data available.

| I/O Register Data (Registers 40014-40022) | | | | | |
|---|---------------------------|------------|---------|---------|----------------|
| Modbus Register | Description | Access | Minimum | Maximum | Units |
| 40010 | Mirror of Coil Data | Read/Write | n/a | n/a | n/a |
| 40014 | Cold Junction Temperature | Read-only | -1000 | 6000 | 0.01 degrees C |
| 40015 | Input 0 | Read-only | -10000 | 10000 | 1mV (0.001V) |
| 40016 | Input 1 | Read-only | -10000 | 10000 | 1mV (0.001V) |
| 40017 | Input 2 | Read-only | -10000 | 10000 | 1mV (0.001V) |
| 40018 | Input 3 | Read-only | -10000 | 10000 | 1mV (0.001V) |
| 40019 | Input 4 | Read-only | -10000 | 10000 | 1mV (0.001V) |
| 40020 | Input 5 | Read-only | -10000 | 10000 | 1mV (0.001V) |
| 40021 | Input 6 | Read-only | -10000 | 10000 | 1mV (0.001V) |
| 40022 | Input 7 | Read-only | -10000 | 10000 | 1mV (0.001V) |

| Modbus Coil | Description | Access |
|-------------|---------------------|------------|
| 00001 | Open Detect Input 0 | Read/Write |
| 00002 | Open Detect Input 1 | Read/Write |
| 00003 | Open Detect Input 2 | Read/Write |
| 00004 | Open Detect Input 3 | Read/Write |
| 00005 | Open Detect Input 4 | Read/Write |
| 00006 | Open Detect Input 5 | Read/Write |
| 00007 | Open Detect Input 6 | Read/Write |
| 00008 | Open Detect Input 7 | Read/Write |
| 00009 | Watchdog Enabled | Read/Write |
| 00010 | Watchdog Event | Read/Write |
| 00011 | Power-up Event | Read/Write |

Watchdog Event & Power-up Event Operation

If Coil 9 (Watchdog Enabled) is set, Coil 10 (Watchdog Event) will set if the Watchdog Timeout value is exceeded. The Watchdog Timeout value is set in Register 40009. When set, Coil 10 can be reset by the controller when normal communications resumes.

The Power-up Event (Coil 11) is set every time the power is applied. It can be cleared by the controller if desired.

5 INSTALLATION / SAFETY

Warning: Remove power from the OCS controller, CAN port, and any peripheral equipment connected to this local system before adding or replacing this or any module.

- All applicable codes and standards should be followed in the installation of this product.
- Shielded, twisted-pair wiring should be used for best performance.
- Shields may be terminated at the module terminal strip.
- In severe applications, shields should be tied directly to the ground block within the panel.
- Use the following wire type or equivalent: Belden 8441.

For detailed installation and a handy checklist that covers panel box layout requirements and minimum clearances, refer to the hardware manual of the controller you are using. (See the **Additional References** section in this document.)

When found on the product, the following symbols specify:



Warning: Consult user documentation.



Warning: Electrical Shock Hazard.

6 TECHNICAL SUPPORT

For assistance and manual up-dates, contact Technical Support at the following locations:

Helpdesk: <http://www.horner-apg.com/helpdesk>

North America:

(317) 916-4274

www.heapg.com

Europe:

(+) 353-21-4321-266

www.horner-apg.com

| |
|---|
| Information in this document is subject to change without notice. This document is the property of Horner APG and shall not be modified as to content unless specifically authorized. |
|---|

NOTES